



toll free: 1-877-706-4480  
international/local: 713-706-4480  
fax: 713-706-4161  
[www.MS3C.co](http://www.MS3C.co)

## MS3C-400X Lightweight X Frame Ambulance Stretcher User Manual

### **Basic Operations:**

- The unit is designed for a two-person operation when loading into a transportation vehicle.
- Otherwise, stretcher is easily maneuvered by single individual.
- For safety considerations, the unit comes with drop down side rails and 2 patient safety restraining straps.
- Two lockable swivel wheels, stretcher can be easily maneuvered and securely positioned next to a bed or a chair for an easy patient transfer.



### **Raising and Lowering Stretcher:**

- To adjust the height of the stretcher, squeeze upward on the red lever located at foot end and slowly lower the unit to any of the preset heights.
- To raise the stretcher, simultaneously squeeze up on the same lever located at foot base and lift the stretcher until the legs spring open and lock into place.

### **Loading Stretcher into Emergency vehicle:**

- Two operators are needed for patient loading.
- When loading stretcher into emergency vehicle, make sure the stretcher is in a level position.
- Push stretcher to the vehicle so that you can rest the safety wheels on the vehicle. Lift the foot end stretcher off the ground until it is level with the vehicle floor.
- Once the weight is off the wheels, squeeze the red release handle located at the foot end of the stretcher. The second operator will lift the leg mechanism into the collapsed position. Push the stretcher into the transportation vehicle. Secure the stretcher with the vehicle locking device.

### **Unloading the stretcher:**

- Release the stretcher from the vehicle locking device.
- Grab main frame and squeeze control handle located in the undercarriage.
- Keeping the stretcher level, pull the stretcher slowly from the vehicle until it reaches the safety stop.
- Stretcher legs will lower and lock into place.