

LED Chic Patient Room Overbed Light

Item #XX-XXNE03LXXXXBPAAFX

Features:

- White patterned linen white or jute acrylic front panel provides a soft glow accent to this contemporary wall mount senior care overbed light.
- The Apex provides both ambient and task light with a four way pull switch, standard (120 volt only). Top diffuser and bottom diffuser are frosted white acrylic.



Construction:

- The light wiring channel is formed from 22-gauge steel. An internal divider provides separate lamp compartments for controlled up light and down light.
- Double laminated fabric material with solid wood trim.
- Fixture can mount horizontally only. Power connections can be made in the fixture wiring channel or in a standard junction box (not included).

Finish:


- Solid wood accent available in espresso or weathered grey finish.

Diffuser:

- Double laminated fabric/acrylic. 0.110" thick fabric is available in jute or linen white.
- Standard top and bottom diffuser.

Electrical:

- Input 120VAC / 60HZ.
- The shorter length fixtures produce 1350 source lumens upward,
- and 2700 down, while the longer fixtures provide 1800 source lumens upward and 3600 down.
- Four position pull switch (on up, on down, on both, all off) are standard and located near the right side of the fixture.
- LED nightlight with on/off control pull-switch is included. Not compatible with dimmers.

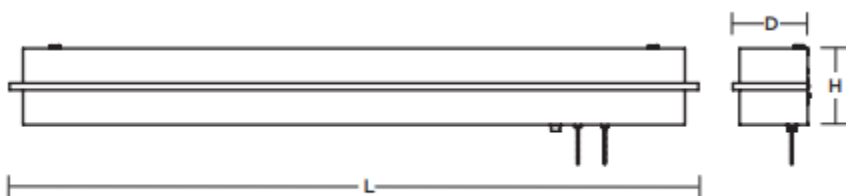

Toll Free 1.877.706.4480 | Local/ International 713.706.4480 | Fax 713.706.4161
www.MSEC.co

LED:

- Integrated LED modules producing a total of 4050 or 5400 source lumens in 3000K CCT., 90 CRI
- Rated for 50,000 hours

Certification:

- All fixtures are cETLus listed for indoor damp locations.
- ADA

Warranty:

Limited warranty: This fixture is free from defects in materials and workmanship for a period of 5 years from date-of-purchase.



Ordering Information:

Espresso/ Jute	Weathered Gray/ Jute	LED	Source Lumens	CCT	L	H	D
TJ- SENE03L0493BPAAFX	TJ- GWNE03L0493BPAAFX	56W	1350 up/2700 down	3000K	38"	4-3/8"	4"
TJ- SENE03L4515BPAAFX	TJ- GWNE03L4515BPAAFX	68W	1800 up/3600 down	3000K	50"	4-3/8"	4"
Espresso/ Linen White	Weathered Gray/ Linen White	LED	Source Lumens	CCT	L	H	D
WL- SENE03L0493BPAAFX	WL- GWNE03L0493BPAAFX	56W	1350 up/2700 down	3000K	38"	4-3/8"	4"
WL- SENE03L4515BPAAFX	WL- GWNE03L4515BPAAFX	68W	1800 up/3600 down	3000K	50"	4-3/8"	4"



Toll Free 1.877.706.4480 | Local/ International 713.706.4480 | Fax 713.706.4161
www.MSEC.co