

Designer Overbed Light with Decorative Accent Trim

Features:

Contemporary three lamp T8 wall mount senior care overbed light. Choose from distinctive faux wood panels with a brushed nickel accent or brushed nickel finish. White frosted acrylic diffuser. Provides both ambient and task light with a four-way pull switch, standard (120 volt only).



Construction

The ballast/wiring channel is formed from 22- gauge steel and is provided with obround mounting slots and wiring access. An internal divider provides separate lamp compartments for controlled up light and down light. Fixture can mount horizontally only. Power connections can be made in the fixture wiring channel or in a standard junction box (not included).

Finish:

All faux wood parts are finished high gloss stained in light oak or mahogany. All metal parts are finished in plated brushed nickel. Internal housing is finished in a lighting grade baked white enamel.

Diffuser:

Diffuser is white frosted acrylic, 0.090" thick. Frame mounts to electrical channel with two decorative screws.

Electrical (Fluorescent):


This unit is wired with two UL listed electronic high-power factor instant start ballasts for one up, two down T8 lamps at 120V- 50/60 Hz AC operation. Four position, three circuit pull switch (on up,



on down, on both, all off) are standard and located toward the right end. LED nightlight and on/off pull switch is included.


Lamping:

For use with (3) T8 linear lamps, not included.

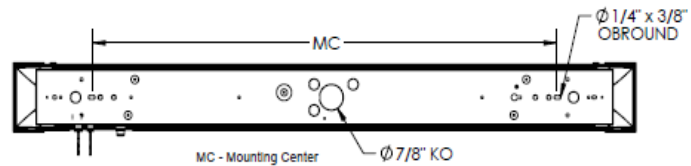

Electrical (LED):

The unit is wired with two UL recognized LED Drivers. The shorter length fixtures produce 1350 source lumens upward, and 2700 down, while the longer fixtures provide 1800 source lumens upward and 3600 down. Four position pull switch(on up, on down, on both, all off) are standard and located near the right side of the fixture. LED nightlight with on/off control pull-switch is included.

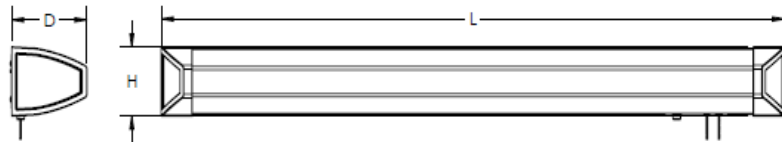

Lamping:

Fixture includes LED modules producing a total of 4050 or 5400 source lumens in 3000K CCT. Rated for 50,000 hours

Certification:

All fixtures are cULus listed for damp locations.



Ordering Specifications:

FLORESCENT

Brushed Nickel	Light Oak	Mahogany	Qty	Lamp	H	L	D	MC
NB8E523BDIAFX	KL8E523BDIAFX	HM8E523BDIAFX	3	F25T8	5- 3/8"	39- 15/16"	6- 1/4"	26- 3/4"
NB8E233BDIAFX	KL8E233BDIAFX	HM8E233BDIAFX	3	F32T8	5- 3/8"	51- 15/16"	6- 1/4"	" 38- 3/4"

LED

Brushed Nickel	Light Oak	Mahogany	LED	Source Lumens	H	L	D	MC
NBNE03L000493BDIAFX	KLNE03L000493BDIAFX	HMNE03L000493BDIAFX	36W down	1350 up/2700	5- 3/8"	39- 15/16"	6- 1/4"	26- 3/4"
NBNE03L004515BDIAFX	KLNE03L004515BDIAFX	HMNE03L004515BDIA FX	45W down	1800 up/3600	5- 3/8"	51- 15/16"	6- 1/4"	" 38- 3/4"



Toll Free 1.877.706.4480 | Local/ International 713.706.4480 | Fax 713.706.4161
www.MSEC.co