

LED Luxurious Patient Room Over Bed Light

Item #GDNEN03LXXXXBTCSAFX

Features:

- White acrylic diffuser panel provides a soft glow accent to this contemporary wall mount senior care overbed light.
- The distressed grey trim accents identify the graceful shape.
- The Scott provides both ambient and task light with a four way pull switch, standard (120 volt only).
- Top diffuser and bottom diffuser are frosted white acrylic.



Construction:


- The light wiring channel is formed from 22-gauge steel and is provided with keyhole mounting slots and wiring access.
- An internal divider provides separate lamp compartments for controlled up light and down light. The decorative frame is stamped steel and glued to the diffuser.
- Fixture can mount horizontally only.
- Power connections can be made in the fixture wiring channel or in a standard junction box (not included).

Finish:

- All metal parts are finished in distressed grey.
- Internal housing is finished in a lighting grade baked white enamel.

Diffuser:

- Diffuser is 0.070" thick matte white acrylic.
- Frame mounts to electrical channel with two decorative screws.

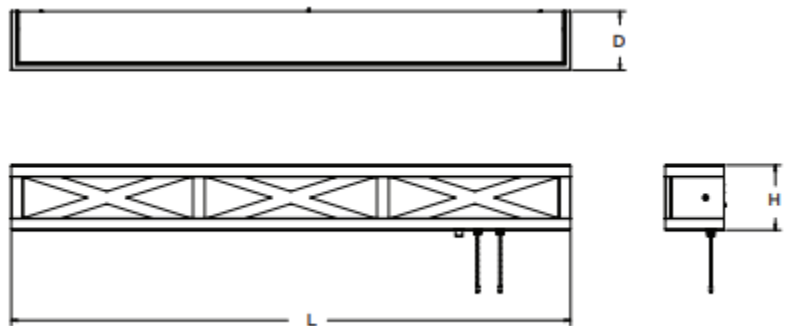

Toll Free 1.877.706.4480 | Local/ International 713.706.4480 | Fax 713.706.4161
www.MSEC.co

Electrical:

- Input 120VAC / 60Hz.
- The shorter length fixtures produce 1350 source lumens upward, and 2700 down, while the longer fixtures provide 1800 source lumens upward and 3600 down.
- Four position pull switch (on up, on down, on both, all off) are standard and located near the right side of the fixture. LED nightlight with on/off control pull-switch is included. Not compatible with dimmers.

LED:

- Integrated LED modules producing a total of 4050 or 5400 source lumens in 3000K CCT., 90 CRI
- Rated for 50,000 hours

Certification:

- cETLus listed for damp locations.
- ADA

Warranty:

- Limited warranty: This fixture is free from defects in materials and workmanship for a period of 5 years from date-of-purchase.

Ordering Specifications:

Distressed Grey	LED	Source Lumens	CCT	L	H	D
GDNE03L0483BTCSAFX	60W	1350 up/2700 down	3000K	38"	5"	4"
GDNE03L4505BTCSAFX	80W	1800 up/3600 down	3000K	50"	5"	4"



Toll Free 1.877.706.4480 | Local/ International 713.706.4480 | Fax 713.706.4161
www.MSEC.co