

## LED Opulent Patient Room Overbed Light

Item#XXNE03KXXXXBYAHAFX



### Features:


- White linen patterned acrylic front panel provides a soft glow accent to this contemporary wall mount senior care overbed light.
- The finished trim accents identify the graceful shape.
- The Hayes provides both ambient and task light with a four way pull switch, standard (120 volt only).
- Top diffuser and bottom diffuser are frosted white acrylic.

### Construction:

- The light wiring channel is formed from 22-gauge steel.
- An internal divider provides separate lamp compartments for controlled up light and down light.
- The decorative bands are stamped steel and glued to the diffuser. Fixture can mount horizontally only.
- Power connections can be made in the fixture wiring channel or in a standard junction box (not included).


### Finish:

- All metal parts are finished in plated satin nickel or oil-rubbed bronze.
- Internal housing is finished in a lighting grade baked white enamel.



### Diffuser:

- Diffuser is 0.070" thick matte white acrylic for the down light and up light, and a white linen pattern acrylic front.
- Frame mounts to electrical channel with two decorative screws.

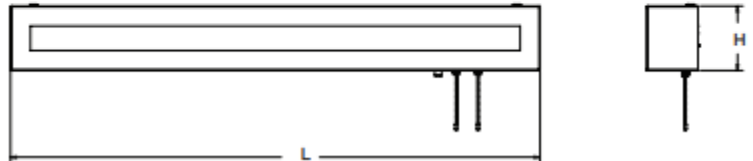

### Electrical:

- Input 120VAC / 60HZ.
- The shorter length fixtures produce 1350 source lumens upward, and 2700 down, while the longer fixtures provide 1800 source lumens upward and 3600 down.
- Four position pull switch (on up, on down, on both, all off) are standard and located near the right side of the fixture.
- LED nightlight with on/off control pull-switch is included.
- Not compatible with dimmers.



Toll Free 1.877.706.4480 | Local/ International 713.706.4480 | Fax 713.706.4161  
www.MSEC.co

**LED:**

- Integrated LED modules producing a total of 4050 or 5400 source lumens in 3000K CCT., 90 CRI
- Rated for 50,000 hours

**Certification:**

- cETLus listed for damp locations.
- ADA

**Warranty:**

- Limited warranty: This fixture is free from defects in materials and workmanship for a period of 5 years from date of purchase.
- Limited warranty: This fixture is free from defects in materials and workmanship for a period of 5 years from date-of-purchase.

**Ordering Specifications:**

<b>Satin Nickle</b>	<b>Oil-Rubbed Bronze</b>	<b>LED</b>	<b>Source Lumens</b>	<b>CCT</b>	<b>L</b>	<b>H</b>	<b>D</b>
NSNE03L0473BYAHAFX	BRNE03L0473BYAHAFX	60W	1350 up/2700 down	3000K	37"	5"	4"
NSNE03L4594BYAHAFX	BRNE03L4594BYAHAFX	80W	1800 up/3600 down	3000K	49"	5"	4"

