

LED Ornate Patient Room Overbed Light

Item #XXNE03LXXXXBNLAAFX



Features:

- White patterned linen acrylic front panel provides a soft glow accent to this contemporary wall mount senior care overbed light.
- The finished trim ends identify the graceful shape.
- The Allen provides both ambient and task light with a four way pull switch, standard (120 volt only).
- Top diffuser and bottom diffuser are frosted white acrylic.

Construction:


- The light wiring channel is formed from 22-gauge steel.
- An internal divider provides separate lamp compartments for controlled up light and down light.
- The decorative bands are stamped steel and glued to the diffuser.
- Fixture can mount horizontally only. Power connections can be made in the fixture wiring channel or in a standard junction box (not included).

Finish:

- All metal parts are finished in satin nickel or oil-rubbed bronze.
- Internal housing is finished in a lighting grade baked white enamel.

Diffuser:

- Diffuser is 0.070" thick matte white acrylic for the down light, and up light, and a white linen pattern acrylic front.
- Frame mounts to electrical channel with two decorative screws.

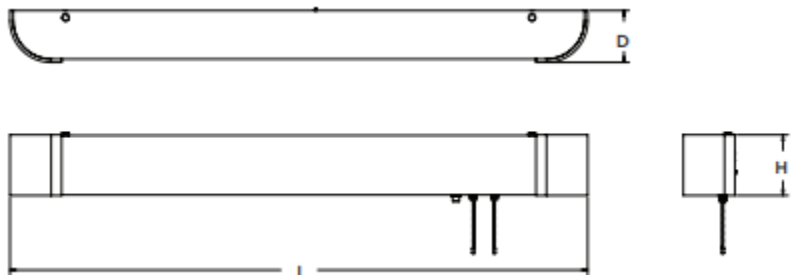

Toll Free 1.877.706.4480 | Local/ International 713.706.4480 | Fax 713.706.4161
www.MSEC.co

Electrical:

- Input 120VAC / 60HZ.
- The shorter length fixtures produce 1350 source lumens upward, and 2700 down, while the longer fixtures provide 1800 source lumens upward and 3600 down.
- Four position pull switch (on up, on down, on both, all off) are standard and located near the right side of the fixture.
- LED nightlight with on/off control pull-switch is included. Not compatible with dimmers.

LED:

- Integrated LED modules producing a total of 4050 or 5400 source lumens in 3000K CCT., 90 CRI
- Rated for 50,000 hours

Certification:

- cETLus listed for damp locations.
- ADA

Warranty:

- Limited warranty: This fixture is free from defects in materials and workmanship for a period of 5 years from date-of-purchase.

Ordering Specifications:

Satin Nickel	Oil-Rubbed Bronze	LED	Source Lumens	CCT	L	H	D
NSNE03L0404BNLAAFX	BRNE03L0404BNLAAFX	60W	1350 up/2700 down	3000K	41-3/8"	5"	3-3/4"
NSNE03L4525BNLAAFX	BRNE03L4525BNLAAFX	80W	1800 up/3600 down	3000K	53-1/4"	5"	3-3/4"

