

LED Ultra Contemporary Overbed Light with Decorative Ends

Item# X-BKNEXLX94BLAAFX

Features:

- Contemporary overbed fixture with metal trim ends and linen acrylic diffuser
- Provides both ambient and task light with a four-way pull switch
- Backplate is die-formed of 22-gauge steel
- Standard mounting holes and hardware are included
- Power supply connections must be made inside a junction box (not included)
- Rated for 50,000 Hours
- 3000K (CCT)
- 90 CRI



Finish:

- Satin Nickel
- Oakley Bronze

Diffuser:

- The linen acrylic front diffuser is cut and thermoformed from a flat sheet
- Top and bottom diffusers are made from .10in thick matte white acrylic sheet

Electrical:

- This unit is direct wired with a low voltage electronic LED driver rated for 120-277V universal voltage
- The constant current LED driver is 0-10 VAC dimmable
- 120-277V- 50/60Hz AC

Certification:

- All fixtures are cULus listed for damp locations

Available Dimensions:

- 60W: 5.0in H x 4.0in D x 37.25in L max
- 80W: 5.0in H x 4.875in D x 50.25in L max


*Limited factory warranty: 5 years



Toll Free 1.877.706.4480 | Local/ International 713.706.4480 | Fax 713.706.4161
www.MSEC.co

Ordering Specifications:

| Satin Nickel | Oakley Bronze | LED | Source Lumens | CCT | L | H | D |
|------------------------|------------------------|---------|-----------------|-----------|---------|----|--------|
| AL-NSNE03L000473BLAAFX | AL-BKNE03L000473BLAAFX | 60 W | 1350Up/2700Down | 3000 K | 37-1/4" | 5" | 4" |
| AL-NSNE03L004594BLAAFX | AL-BKNE03L004594BLAAFX | 80 W | 1800Up/3600Down | 3000 K | 49-1/4" | 5" | 4-7/8" |

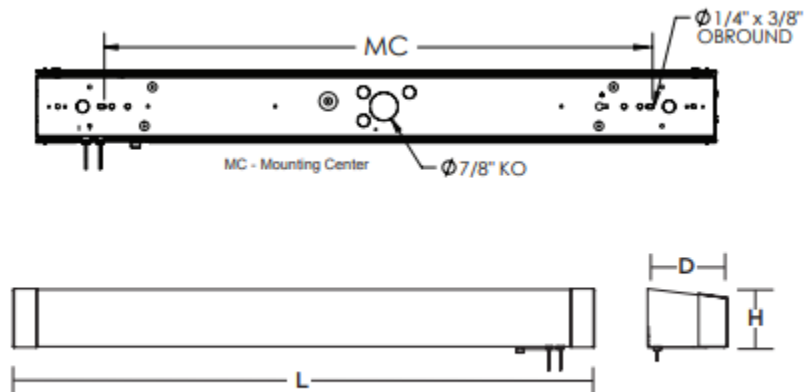

Toll Free 1.877.706.4480 | Local/ International 713.706.4480 | Fax 713.706.4161
www.MSEC.co